

## RO Processor Prefilter Change Procedure



Turn RO controller switch to OFF position.



Close RO processor inlet valve F20



Remove RO processor cover. Open "TO flush valve".



Rotate clear sump left with sump wrench. Rinse sump with mild soap solution.




Lubricate new o-ring with supplied lubricant.



Place new cartridge into sump and tighten sump with sump wrench to a snug fit.



Slowly open RO processor inlet valve F20.

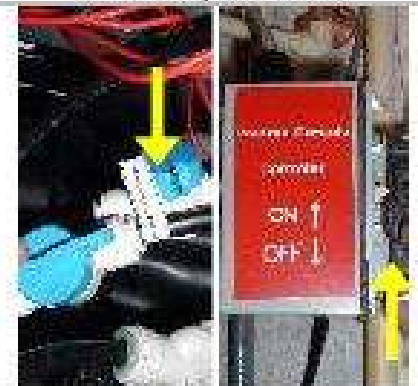

Close "TO flush valve". Turn RO controller switch to ON position.